


Measuring Guidelines

NEW YORKER Rigid Valance Awning - for Windows or Doors

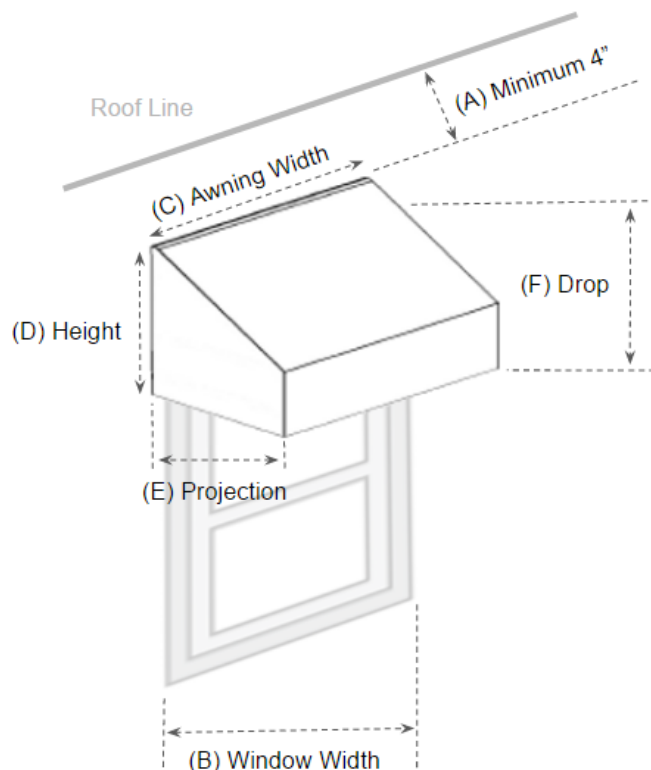

Example diagram for window installation

1. Verify you have adequate mounting space, free from obstructions (light fixtures, downspouts, etc.). The New Yorker is designed for wall mounting; it's not recommended that the awning be mounted directly on window casing or door trim. The typical minimum mounting space required above a window or door that opens inward and not outward is 4" (A). For out swinging doors see paragraph 4 below.
2. Measure the width of the window, door or space where the awning will be installed (B) and select the appropriate width option (C). Beauty-Mark fixed fabric awnings are designed 4.5" wider than standard window/door openings so they will anchor into the studs surrounding the window or door.

Example: the actual width of an awning for a 3' wide window is 40.5"

3. The specific combination of awning height (D) and projection (E) is somewhat personal preference but predicated on the height of the window (in this example diagram) and the amount of drop (F) or window coverage preferred.

Note: The specific amount of drop or window coverage achieved will vary based on the exact mounting position and height of the awning purchased. Greater amounts of drop/coverage will produce more shade and subsequent energy savings by allowing less sun light in the window.

4. **Out Swinging Doors:** The minimum recommended awning project (E) for out swinging doors is 36". This will allow for a maximum drop (F) of 10" and not interfere with a typical door when open. Awnings with less than a 36" projection (E) will allow for 0" maximum drop (F) for out swinging doors.